

LCD721 is the optional accessory of VIC-T801.

You can use LCD721 to set the system parameters, such as Terminal ID, Centre IP, Port, APN. LCD721 is also used for displaying text message from the centre.

Introduction to LCD721 buttons.



“0-9” at the bottom of LCD721 is used for input (number or letter).

“F1” is used for switching the screen (for input content).

“F2” is reserved.

“F3” is used for deleting the parameter value.

“F4” is used for exit.

“OK” is used for confirmation.

“<”, “>” is used for changing your choice.

How to use LCD721.

Press ‘OK’, Pop up the menu:

drivers ID	SMS
Telephone	the status of system
Send the alarm message	parameter setting
system rebooted	modify the password

“Drivers ID” is set by user.

“SMS” is reserved.

“Telephone” is reserved.

Choose the “Parameters setting”, then Press “ok”.

Input the password (333666999) of administrator to enter into the system.

terminal ID	centre IP
port	APN
The number of the centre	the prolong time of ACC
TIME ZONE	the series number

“The number of the centre” can not be modified.

“the prolong time of ACC” is reserved.

“the series number” is reserved.

a. terminal ID

Choose “terminal ID” then press “OK”

Input 15 bit characters then press “ok” to back.

b. centre IP

Choose “centre IP” , then press “ok”

Input IP of your server then press “ok” to back.

c. port

Choose the “port” then press “ok”

Input port of your server then press the “ok” to back.

d. APN

Choose the “APN” then press “ok”

Input APN of the local mobile operator then press “ok” to back.

e. Time zone

Press left or right to adjust the time

f. Restart of system

Press F4 to exit, until you see the menu:

drivers ID	SMS
Telephone	the status of system
Send the alarm message	parameter setting
system rebooted	modify the password

Choose “system rebooted” then press “ok”

Then input the password (333666999) of administrator to restart the system.